


Fundo Ligno Shower System

Product Quantity Estimates by Installation Size

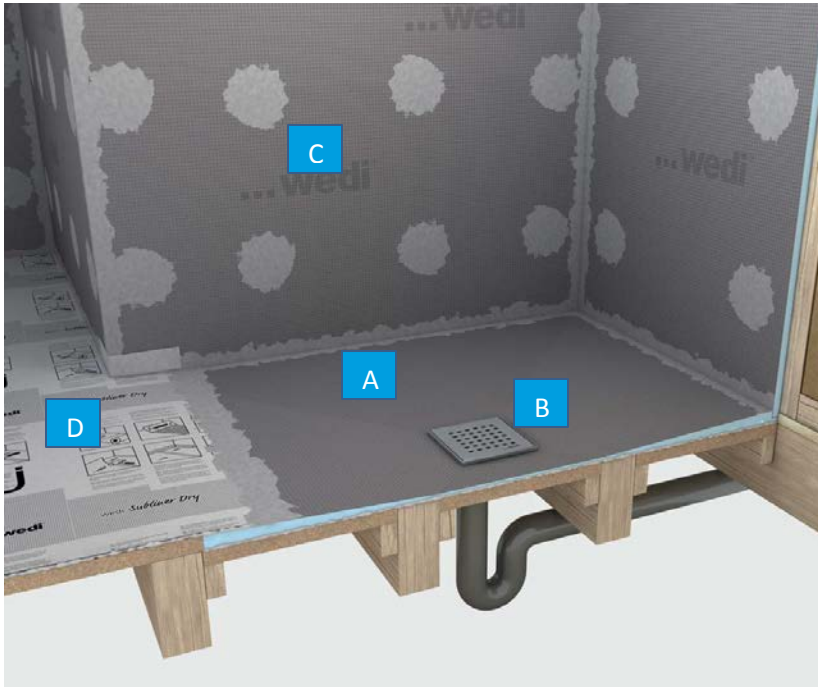

wedi Fundo Ligno Shower System

- A** wedi Fundo Ligno Shower Base
- B** wedi Fundo Drain Kit / Cover Plate
- C** wedi Building Panel
- D** wedi Subliner Dry Sheet Membrane

wedi Fundo Ligno Shower 36" x 48"		6 ½' walls	8' walls
Description	Part Number	Quantity	Quantity
wedi Fundo Ligno Shower Base 36" x 48"	073732014	1	1
wedi Drain Kit / Cover Plate	US1000003	1	1
wedi Building Panel 3' x 5' x ½"	010717064	6	6
wedi 1 5/8" Non-Rust Screws 100 ct.	US5000016	1	1
wedi ¼" Metal Washers with Tabs 100 ct.	US5000014	1	1
wedi Joint Sealant 10.5 oz. cartridge	US5000013	7-8	8-9

wedi Fundo Ligno Shower 48" x 48"		6 ½' walls	8' walls
Description	Part Number	Quantity	Quantity
wedi Fundo Ligno Shower Base 48" x 48"	073732015	1	1
wedi Drain Kit / Cover Plate	US1000003	1	1
wedi Building Panel 3' x 5' x ½"	010717064	7	7
wedi 1 5/8" Non-Rust Screws 100 ct.	US5000016	1	1
wedi ¼" Metal Washers with Tabs 100 ct.	US5000014	1	1
wedi Joint Sealant 10.5 oz. cartridge	US5000013	8-9	9-10

*Materials calculated for shower walls 6 1/2 ft. and 8 ft. tall, including three framed walls (one short back wall, two short side wall) to be tiled in wet area. Curb/ramp is optional and for one long side of a rectangular shower, seats optional, bench is for one short shower wall and optional, soap niches optional. See back page for options. Estimates not guaranteed and must be field verified by customer (framing may vary).

Fundo Ligno Shower System

Product Quantity Estimates by Installation Size



wedi Fundo Ligno Shower 36" x 60"		6 ½' walls	8' walls
Description	Part Number	Quantity	Quantity
wedi Fundo Ligno Shower Base 36" x 60"	073732016	1	1
wedi Drain Kit / Cover Plate	US1000003	1	1
wedi Building Panel 3' x 5' x ½"	010717064	6	6
wedi 1 5/8" Non-Rust Screws 100 ct.	US5000016	1	1
wedi ¼" Metal Washers with Tabs 100 ct.	US5000014	1	1
wedi Joint Sealant 10.5 oz. cartridge	US5000013	8-9	9-10

wedi Fundo Ligno Shower 48" x 60"		6 ½' walls	8' walls
Description	Part Number	Quantity	Quantity
wedi Fundo Ligno Shower Base 48" x 60"	073732017	1	1
wedi Drain Kit / Cover Plate	US1000003	1	1
wedi Building Panel 3' x 5' x ½"	010717064	7	7
wedi 1 5/8" Non-Rust Screws 100 ct.	US5000016	1	1
wedi ¼" Metal Washers with Tabs 100 ct.	US5000014	1	1
wedi Joint Sealant 10.5 oz. cartridge	US5000013	9-10	10-11

wedi Fundo Ligno Shower 60" x 60"		6 ½' walls	8' walls
Description	Part Number	Quantity	Quantity
wedi Fundo Ligno Shower Base 60" x 60"	073732018	1	1
wedi Drain Kit / Cover Plate	US1000003	1	1
wedi Building Panel 3' x 5' x ½"	010717064	7	8
wedi 1 5/8" Non-Rust Screws 100 ct.	US5000016	1	2
wedi ¼" Metal Washers with Tabs 100 ct.	US5000014	1	2
wedi Joint Sealant 10.5 oz. cartridge	US5000013	12-13	13-14

*Materials calculated for shower walls 6 1/2 ft. and 8 ft. tall, including three framed walls (one short back wall, two short side wall) to be tiled in wet area. Curb/ramp is optional and for one long side of a rectangular shower, seats optional, bench is for one short shower wall and optional, soap niches optional. See back page for options. Estimates not guaranteed and must be field verified by customer (framing may vary).

Fundo Ligno Shower System

Product Quantity Estimates by Installation Size



Additional Options/Substitutions

wedi Building Panel

<u>Description</u>	<u>Part Number</u>	<u>Qty.</u>
Building Panel 3' x 8' x 1/2"	010000912	_____
Building Panel 4' x 8' x 1/2"	010001612	_____

wedi Recessed Niches

<u>Description</u>	<u>Part Number</u>	<u>Qty.</u>
Niche 16" x 8"	US3000003	_____
Niche 16" x 12"	US3000004	_____
Niche 16" x 16"	US3000005	_____
Niche 16" x 22" w/adj. shelf	US3000007	_____
Niche 16" x 30" Cathedral	US3000016	_____
Niche Lean Combo 16" x 42"	US3000006	_____

wedi Shower Seats/Benches

<u>Description</u>	<u>Part Number</u>	<u>Qty.</u>
Suspended Corner Seat M	US3000001	_____
Suspended Corner Seat L	US3000002	_____
Triangle Corner Seat	073784101	_____
Rectangular Bench	073784100	_____
Sanoasa Shower Bench 1M	076447030	_____
Sanoasa Shower Bench 1L	076447031	_____
Sanoasa Shower Bench 2M	076447032	_____
Sanoasa Shower Bench 2L	076447033	_____
Sanoasa Shower Bench 3M	076447034	_____
Sanoasa Shower Bench 3L	076447035	_____

wedi Shower Base Extensions

<u>Description</u>	<u>Part Number</u>	<u>Qty.</u>
Ligno Extension 12" x 60"	073732030	_____

wedi Fundo Cover Plates

<u>Description</u>	<u>Part Number</u>	<u>Qty.</u>
Oil Rubbed Bronze Cover Plate	US1000008	_____
Fino Tileable Cover Plate (square)	US1000020	_____
Fino Cover Set 1.1 (square/daisy)	US1000021	_____
Fino Cover Set 1.1.2 (round/daisy)	US1000023	_____
Fino Cover Set 3.1 (square/pebble)	US1000024	_____
Fino Cover Set 3.1.2(round/pebble)	US1000026	_____

wedi Subliner Dry

<u>Description</u>	<u>Part Number</u>	<u>Qty.</u>
Waterproof Sealing Tape 5" x 32.8'	US5000002	_____
Sealing Tape Inside Corner (2/pk)	US5000007	_____
Sealing Tape Outside Corner (2/pk)	US5000008	_____
Subliner Dry Membrane (53 sq ft.)	US5000001	_____

*Materials calculated for shower walls 6 1/2 ft. and 8 ft. tall, including three framed walls (one short back wall, two short side wall) to be tiled in wet area. Curb/ramp is optional and for one long side of a rectangular shower, seats optional, bench is for one short shower wall and optional, soap niches optional. See back page for options. Estimates not guaranteed and must be field verified by customer (framing may vary).